

DS40 Printer

- DS40 uses 1 paper roll (400+ prints) and 1 ribbon set
 - Paper and ribbon are matched; change both at the same time
- Take paper holder out of printer and load paper roll; no special method
- Place paper roll into printer with tab and paper edge rolling off the top toward you
- Remove tab and guide the paper edge down and into bottom of printer
- You will hear a “beep” to stop advancing; the paper is advanced properly
- Carefully open the plastic around the ribbon rolls and remove them
- Remove the ribbon tray from the printer and place on a flat surface
- Place pink ribbon into the back slots with the GEAR ON LEFT
- Place the blue ribbon into the front slots with the GEAR ON LEFT
- Take up any slack on the FEED (blue) Roller and place tray into printer
- Close printer and after multiple light flashes and “whirring” - 3 quick blank prints should come out and final black trimmed print
- When loading the paper remember to remove the “French Fries” – paper trims in the catch tray you removed to get to the paper
- **NEVER leave paper, ribbon or French fries in the printer when it is to be moved!**